
ST25TA512



NFC Forum Type 4 Tag IC with 512-bit EEPROM

Datasheet - production data

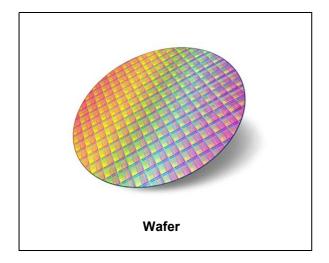



Description

The ST25TA512 device is an NFC tag IC.

It embeds an EEPROM memory, and can be operated from a 13.56 MHz RFID reader or an NFC phone.

The ST25TA512 is an NFC Forum Type 4 Tag; it communicates using the ISO/IEC 14443 Type A protocol.

Features

Contactless interface

- NFC Forum Type 4 Tag, certified by the NFC Forum
- ISO/IEC 14443 Type A
- 106 kbps data rate
- Internal tuning capacitance: 50 pF

Memory

- 64-byte (512 bits) EEPROM
- · Supports NDEF data structure
- · Data retention: 200 years
- Endurance: 1 million erase-write cycles
- · Reads up to 64 bytes in a single command
- Writes up to 54 bytes in a single command
- · Chaining capability
- 7-byte unique identifier (UID)
- 128-bit passwords protection
- 20-bit event counter with anti-tearing

Contents ST25TA512

Contents

1	Fund	tional description	. 8
	1.1	Functional mode	. 9
		1.1.1 Tag mode	9
2	Sign	al descriptions	10
	2.1	Antenna coil (AC0, AC1)	10
3	ST2	TA512 memory management	11
	3.1	Memory structure	.11
		3.1.1 File identifier	. 11
		3.1.2 CC file layout	. 11
		3.1.3 NDEF file layout	. 12
		3.1.4 System file layout	. 13
	3.2	Read and write access rights to the NDEF File	13
		3.2.1 State of the Read and Write access rights	. 14
		3.2.2 Changing the read access right to NDEF files	. 14
		3.2.3 Changing the write access right to NDEF files	. 15
	3.3	Access right life time	16
	3.4	NDEF file passwords	16
	3.5	Read/Write counter	16
4	Com	munication mechanism	18
	4.1	Master and slave	18
5	RF c	ommand sets	19
	5.1	Structure of the command sets	20
	5.2	I-Block format	20
		5.2.1 C-APDU: payload format of a command	. 22
		5.2.2 R-APDU: payload format of a response	. 22
	5.3	R-Block format	23
	5.4	S-Block format	24
	5.5	CRC of the RF frame	25
	5.6	NFC Forum Type 4 Tag protocol	
	0.0		



		5.6.1	Commands set	25
		5.6.2	Status and error codes	25
		5.6.3	NDEF Tag Application Select command	27
		5.6.4	Capability Container Select command	27
		5.6.5	NDEF Select command	28
		5.6.6	System File Select command	29
		5.6.7	ReadBinary command	30
		5.6.8	UpdateBinary command	31
	5.7	ISO/IE	C 7816-4 commands	. 32
		5.7.1	Verify command	32
		5.7.2	Change Reference Data command	33
		5.7.3	Enable Verification Requirement command	34
		5.7.4	Disable Verification Requirement command	35
	5.8	ST pro	pprietary command set	. 37
		5.8.1	ExtendedReadBinary command	37
		5.8.2	EnablePermanentState command	37
		5.8.3	UpdateFileType command	38
	5.9	Specif	ic RF command set	. 40
		5.9.1	Anticollision command set	40
		5.9.2	RATS command and ATS response	41
		5.9.3	PPS command and response	42
6	RF d	evice o	peration	. 44
	6.1	Antico	Ilision and Device Activation command set for the RF interface .	. 44
	6.2	Open	an RF session	. 44
	6.3	Close	an RF session	. 44
	6.4		ative command set	
7	Fund	tional _l	procedures	. 45
	7.1	Select	ion of an NDEF message	. 45
	7.2	Readii	ng of an NDEF message	. 45
	7.3	Readii	ng a locked NDEF file	. 45
	7.4	Lockin	ng an NDEF file	. 45
	7.5	Unlock	king an NDEF file	. 46
	7.6	Reach	ing the read-only state for an NDEF file	. 46
	7.7		ng or Updating an NDEF file	
<u></u>		-		

Contents ST25TA512

	Changing a File Type Procedure (applicable only on file 0x0001)	. 46
8	JID: Unique identifier	. 47
9	Maximum ratings	. 48
10	RF electrical parameters	. 49
11	Ordering information	. 50
12	Revision history	. 51

ST25TA512 List of tables

List of tables

Table 1.	Signal names	. 8
Table 2.	Functional mode	. 9
Table 3.	File identifier	11
Table 4.	CC file layout for 1 NDEF file	11
Table 5.	NDEF file layout	12
Table 6.	Field list	
Table 7.	Details about the Counter config field	13
Table 8.	Read access right	14
Table 9.	Write access right	14
Table 10.	RF command sets	19
Table 11.	I-Block format	20
Table 12.	PCB field of the I-Block format	21
Table 13.	C-APDU format	22
Table 14.	R-APDU format	
Table 15.	R-Block format	23
Table 16.	R-Block detailed format	
Table 17.	S-Block format	
Table 18.	S-Block detailed format	
Table 19.	Command set overview	
Table 20.	Status code of the ST25TA512	
Table 21.	Error codes of the ST25TA512	26
Table 22.	C-APDU of the NDEF Tag Application Select command	27
Table 23.	R-APDU of the NDEF Tag Application Select command	27
Table 24.	C-APDU of the Capability Container Select command	28
Table 25.	R-APDU of the Capability Container Select command	28
Table 26.	C-APDU of the NDEF Select command	
Table 27.	R-APDU of the NDEF Select command	29
Table 28.	C-APDU of the System File Select command	
Table 29.	R-APDU of the System File Select command	
Table 30.	C-APDU of the ReadBinary command	30
Table 31.	R-APDU of the ReadBinary command	30
Table 32.	C-APDU of the UpdateBinary command	
Table 33.	R-APDU of the UpdateBinary command	
Table 34.	Verify command format	
Table 35.	R-APDU of the Verify command	
Table 36.	Change reference data command format	
Table 37.	R-APDU of the Change Reference Data command	
Table 38.	Enable Verification Requirement command format	
Table 39.	R-APDU of the Enable Verification Requirement command	
Table 40.	Disable Verification Requirement command format	
Table 41.	R-APDU of the Disable Verification Requirement command	
Table 42.	C-APDU of the ExtendedReadBinary command	
Table 43.	R-APDU of the ExtendedReadBinary command	
Table 44.	EnablePermanentState command format	
Table 45.	R-APDU table of the EnablePermanentState command	
Table 46.	UpdateFileType command format	39
Table 47.	R-APDU of the UpdateFileType command	
Table 48.	Commands issued by the RF host	40



List of tables ST25TA512

Table 49.	Example of anticollision sequence	
Table 50.	RATS command	41
Table 51.	Conversion from FSDI to FSD	41
Table 52.	ATS response	42
Table 53.	PPS command	43
Table 54.	Ascending and descending data rate coding	43
Table 55.	PPS response	43
Table 56.	UID format	47
Table 57.	Absolute maximum ratings	48
Table 58.	Default operating conditions	49
Table 59.	RF characteristics	49
Table 60.	Ordering information scheme for packaged devices	50
Table 61	Document revision history	

ST25TA512 List of figures

List of figures

Figure 1.	ST25TA512 block diagram	. 8
Figure 2.	Changing the read access right to an NDEF file	15
Figure 3.	Changing the write access right to an NDEF file	15



1 Functional description

The ST25TA512 device is an NFC tag that can be accessed from the RF interface, based on the ISO/IEC 14443 Type A standard. The ST25TA512 is compatible with the NFC Forum Type 4 Tag specifications and supports all corresponding commands.

Figure 1 displays the block diagram of the ST25TA512 device.

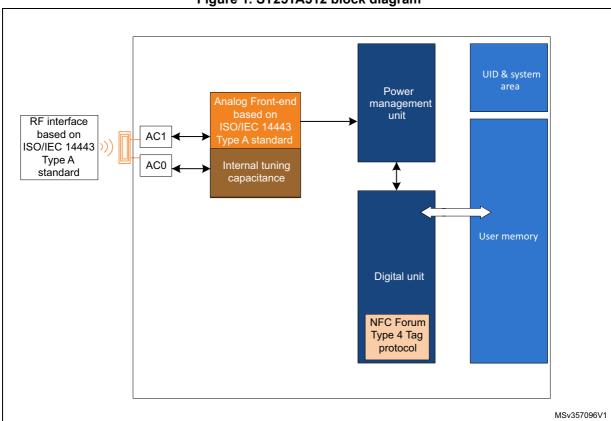


Figure 1. ST25TA512 block diagram

Table 1. Signal names

Signal name	Function	Direction	
AC0, AC1	Antenna coils	-	

8/52 DocID027776 Rev 4

1.1 Functional mode

The ST25TA512 has just one functional mode available (see Table 2).

Table 2. Functional mode

Mode Supply source		Comments		
Tag mode RF field only		The RF interface operates only when RF field level is sufficient.		

1.1.1 Tag mode

The ST25TA512 is supplied by the RF field and can communicate with an RF host (RFID reader or an NFC phone). The User memory can be accessed by the RF commands.



 
Signal descriptions ST25TA512

2 Signal descriptions

2.1 Antenna coil (AC0, AC1)

These inputs are used to connect the device to an external coil exclusively. It is advised not to connect any other DC or AC path to AC0 or AC1.

When correctly tuned, the coil is used to access the device using NFC Forum Type 4 commands.



3 ST25TA512 memory management

3.1 Memory structure

The ST25TA512 supports the NDEF Tag Application as defined in the NFC Forum Type 4 Tag. The ST25TA512 is composed of three files:

- a Capability Container (CC) file
- an NDEF file
- a System file: this is an ST-proprietary file

The System file contains some information on the configuration of the ST25TA512 device. The CC file gives some information about the ST25TA512 itself and the NDEF file. The NDEF file contains the User data.

3.1.1 File identifier

The file identifier is the value used in the Select command to select a file.

Table 3. File identifier

File identifier	Meaning
0xE101	System file
0xE103	CC file
0x0001	NDEF file

3.1.2 CC file layout

The CC file gives some information about the ST25TA512 and the NDEF file. This file is a read-only file for the RF host and cannot be modified by issuing a write command.

The T field, Read Access and Write Access fields can be changed by the RF host by issuing a specific process (refer to Section 7: Functional procedures).

Table 4. CC file layout for 1 NDEF file

File offset	Meaning	Value	Comments
0x0000	Length CC file	0x000F	15 bytes
0x0002	Mapping version ⁽¹⁾	0x20 or 0x10	V 2.0 or V 1.0
0x0003	Maximum number of bytes that can be read	0x0040	64 bytes
0x0005	Maximum number of bytes that can be written	0x0036	54 bytes

File offset	Meaning	Value	Comments
0x0007		0x04 ⁽²⁾	T field
0x0008]	0x06	L field
0x0009		0x0001	FileID
0x000B	NDEF file control TLV	0x0040	Maximum NDEF file size in Bytes
0x000D		0x00 ⁽²⁾	Read access
0x000E		0x00 ⁽²⁾	Write access

Table 4. CC file layout for 1 NDEF file (continued)

3.1.3 NDEF file layout

The NDEF file contains the NDEF message which contains the User data. The RF host can read and write data inside the file. The first two bytes named NDEF Message Length define the size of the NDEF message. The NDEF Message Length shall be managed by the application and the ST25TA512 device does not check if its value is relevant vs the data written by the RF host. The ST25TA512 device uses the NDEF Message Length, e. g. the standard read can be processed only inside the NDEF message; otherwise, the ST25TA512 device returns an error code. For more details about the read command, refer to Section 5.6.7: ReadBinary command.

Table 5. NDEF file layout

File offset	Byte 0	Byte 1	Byte 2	Byte 3	
0x0000	NDEF Mess	sage Length	User data	User data	
0x0004	User data	User data	User data	User data	
0x003C				User data	

12/52 DocID027776 Rev 4



According to the reader command format ST25TA512 will automatically align to the corresponding NFC Forum version.

^{2.} Delivery state.

0x003F

0xE5

3.1.4 System file layout

The system file specifies the configuration of the ST25TA512. *Table 6* lists the different fields.

File offset Read access Field name No. of bytes Write access **Delivery state** 0x0000 Length system file 2 Yes 0x0012 0x0002 ST reserved 1 Yes None 0x80 Yes⁽¹⁾ 0x0003 **Event Counter Config** 1 Yes 0x00 20 bits counter 0x0004 0x000000 3 Yes None (MS nibble 0x0) $0x13^{(2)}$ 0x0007 Product version 1 Yes None 0x02E5 xx xx 7 0x0008 UID Yes None $xx xx xx^{(3)}$

Table 6. Field list

Yes

Yes

None

None

2

1

0b1: on Write

0x000F

0x0011

Memory Size - 1

IC reference code

File offset b7 b6-b2 b1 b0

0x0003

Counter config lock bit:
0b0: unlocked
0b1: locked

0b00000: ST reserved

Counter enable:
0b0: disable
0b1: enable

Counter increment:
0b0: on Read

Table 7. Details about the Counter config field

3.2 Read and write access rights to the NDEF File

The NDEF file can be locked for read or write accesses. It is also protected by a 128-bit password that the host shall present before accessing the NDEF file. There are two 128-bit passwords, one for the read access and the other one for the write access.

An NDEF file can be permanently locked for read or write accesses. Thus, the host cannot access the NDEF file.



Configuration bytes can be locked by setting the Most significant bit to 1. Once locked, these bytes cannot be changed anymore.

^{2.} ST reserved.

^{3.} x values are defined by ST to ensure UID unicity.

The read password shall be sent to the ST25TA512 device before reading a read-locked NDEF file.

The write password shall be present on the ST25TA512 device before writing a write-locked NDEF file. The write password shall be sent to change the read or write access. The read or write access right is defined for the NDEF file.

3.2.1 State of the Read and Write access rights

Two bytes in the CC file are used to define the Read and Write access rights to the NDEF file. For more details, refer to Section 3.1.2: CC file layout.

Table 8. Read access right

Value	Meaning			
0x00	Read access without any security			
0x80	Locked (1)			
0xFE	Read not authorized			

^{1.} The read password shall be sent before reading in the NDEF file.

Table 9. Write access right

Value	Meaning		
0x00	Write access without any security		
0x80	Locked (1)		
0xFF	Write not authorized		

^{1.} The write password shall be sent before writing in the NDEF file.

The state 0xFF and 0xFE cannot be changed by using the Read or Write passwords.

3.2.2 Changing the read access right to NDEF files

The state diagram of Figure 2 shows how to change the access right to read an NDEF file.

577

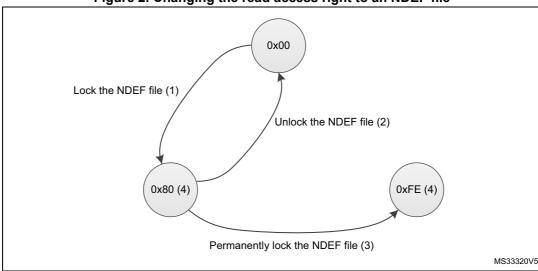


Figure 2. Changing the read access right to an NDEF file

- 1. See the procedure to lock the read access (Section 7.4: Locking an NDEF file).
- 2. See the procedure to unlock the read access (Section 7.5: Unlocking an NDEF file).
- 3. See the procedure to permanently lock the read access.
- 4. Proprietary state, not defined by NFC Forum Type 4 Tag.

3.2.3 Changing the write access right to NDEF files

The state diagram on Figure 3 shows how to change the write access right to an NDEF file.

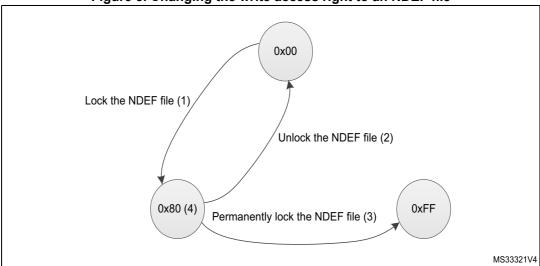


Figure 3. Changing the write access right to an NDEF file

- 1. See the procedure to lock the write access.
- 2. See the procedure to unlock the write access.
- 3. See the procedure to permanently lock the write access (Section 7.6: Reaching the read-only state for an NDEF file).
- 4. Proprietary state, not defined by NFC Forum Type 4 Tag.

3.3 Access right life time

The access right life time is validated while the NDEF file is selected or until the end of the RF session. Once the read or write access right is granted, the host can send one or more ReadBinary or UpdateBinary commands.

At the end of a session or when the host selects another file, the read and write access rights are initialized.

3.4 NDEF file passwords

The NDEF file passwords protect the read or write access from an RF interface from/to an NDEF file.

Two NDEF file passwords are available for each NDEF file:

- Read password
- Write password

The length of a password is 128 bits (16 bytes).

3.5 Read/Write counter

A 20 bits counter can track the read or write events on the NDEF file.

It benefits from an anti-tearing mechanism, that ensures the consistency of the counter, even if there has been an electrical problem during its increment.

The value of the Read/Write counter can be checked by any application, by reading suitable bytes in System file (see *Section 3.1.4*).

If enabled, the Read/Write counter will be incremented on first event (exclusively Read or Write) which is performed on the NDEF File, inside an RF session (an RF session is entered when ST25TA512 receives a valid "Select Application" command).

The counter is reset when it is disabled.

Apart from these procedures, there is no way to act on the value of this counter.

The Read/Write counter can be configured through a specific byte in System file (see Section 3.1.4).

This configuration byte allows to:

- Enable or disable this counter
- Define if the counter must be incremented on a read or write sequence
- Definitively lock this configuration byte

Warning: Once this configuration byte is locked, it cannot be changed anymore: the counter will behave accordingly.

5/

If enabled, the Read/Write counter will have an impact on the execution time of the event which is countered: the counter increment needs some write cycles of specific EEPROM cells automatically managed by ST25TA512, which increase the total time before the response is sent to the reader.

As a consequence, an S(WTX) request can be issued on the command that will increment the counter (see Section 5.4: S-Block format).



4 Communication mechanism

This section describes the principle of communication between an RF host and the ST25TA512 device.

4.1 Master and slave

The ST25TA512 acts as a slave device on the RF channel and therefore waits for a command from the RF host before sending its response.

The RF host shall generate the RF field and the RF commands.



5 RF command sets

This section describes the ST25TA512 command sets that can be issued by the RF host.

There are three command families:

- the NFC Forum Type 4 Tag command set
- the ISO/IEC 7816-4 command set
- the proprietary command set

The NFC Forum Type 4 Tag command set and the ISO/IEC 7816-4 command set use the I-Block format. For more details about the I-Block format, refer to Section 5.2: I-Block format.

Two other command formats exist:

- · the commands using the R-Block format
- the commands using the S-Block format

For more details about these formats, refer to Section 5.3: R-Block format and to Section 5.4: S-Block format.

This section gives a brief description of the RF host commands. The format of these command sets is the I-Block format.

Table 10 lists the RF command sets.

Table 10. RF command sets

Family command set	Command name	Class byte	Instruction code	Brief description
	NDEF Tag Application Select	0x00	0xA4	NDEF Tag Application Select
	CC select	0x00	0xA4	Selects the CC file
NFC Forum	NDEF select	0x00	0xA4	Selects the NDEF file
Type 4 Tag	System select	0x00	0xA4	Selects the system file
,, G	ReadBinary	0x00	0xB0	Reads data from file
	UpdateBinary	0x00	0xD6	Writes or erases data to a NDEF file
	Verify	0x00	0x20	Checks the right access of a NDEF file or sends a password
ISO/IEC 7816-4	ChangeReferenceData	0x00	0x24	Changes a Read or write password
	EnableVerificationRequirement	0x00	0x28	Activates the password security
	DisableVerificationRequirement	0x00	0x26	Disables the password security
	EnablePermanentState	0xA2	0x28	Enables the Read Only or Write Only security state
ST proprietary	ExtendedReadBinary	0xA2	0xB0	Reads data from file
	UpdateFileType	0xA2	0xD6	Sets file type to NDEF or proprietary

5.1 Structure of the command sets

The exchange of data between the RF host and the ST25TA512 uses three kinds of data formats, called blocks:

- I-Block (Information block): to exchange the command and the response
- R-Block (Receive ready block): to exchange positive or negative acknowledgment
- S-Block (Supervisory block): to use either the Deselect command or the Frame Waiting eXtension (WTX) command or response

This section describes the structure of I-Block, R-block and S-Block. This format is used for the application command set.

5.2 I-Block format

The I-Block is used to exchange data between the RF host and the ST25TA512. It is composed of three fields. *Table 11* details the I-Block format.

Table 11. I-Block format

Name	Sc	oD.	Payload	EoD
	РСВ	DID	-	CRC
Length	1 byte 1 byte		1 to 251 bytes	2 bytes
PCB field				
DID field (optional)		•		
RF host to ST25TA5 ST25TA512 to RF h			-	
2 CRC bytes				

Table 12	PCB field	of the I-Block	format

	b7-b6	b5	b4	b3	b2	b1	b0
	0b00	0	0	х	0	1	х
I-Block							
RFU							
Must be set	to 0		•				
DID field is p	oresent, if bit						
Must be set to 0							
Must be set	to 1					•	
Block numb	er ⁽¹⁾						1

^{1.} Follow ISO 14443_4 Block numbering rules (see note)

Note: Block numbering rules:

Reader rules:

Rule A: The Reader block number shall be initialized to 0.

Rule B: When an I-block or an R(ACK) block with a block number equal to the current block number is received, the Reader shall toggle the current block number before optionally sending a block to the ST25TA512.

ST25TA512 rules:

Rule C: The ST25TA512 block number shall be initialized to 1 at activation.

Rule D: When an I-block is received, the ST25TA512 shall toggle its block number before sending a block.

Note: The ST25TA512 may check if the received block number is not in compliance with Reader rules to decide neither to toggle its internal block number nor to send a response block.

Rule E: When an R(ACK) block with a block number not equal to the current ST25TA512 block number is received, the ST25TA512 shall toggle its block number before sending a block.

Note: There is no block number toggling when an R(NAK) block is received.

When the RF host sends a command to the ST25TA512 the format of the payload is the C-APDU.

When the ST25TA512 sends a command to the RF host, the format of the payload is the R-APDU.

5.2.1 C-APDU: payload format of a command

The C-APDU format is used by the RF host to send a command to the ST25TA512. *Table 13* describes its format.

Table 13. C-APDU format

Name	Payload field								
Name	CLA	INS	P1	P2	L _C	Data	Le		
Length	1 byte	1 byte	1 byte	1 byte	1 byte	Lc byte	1 byte		
Class byte - 0x00: standard - 0xA2: ST com									
Instruction byte									
Param Byte 1									
Param Byte 2	Param Byte 2								
Number of bytes of the Data field									
Data bytes									
Number of bytes	s to be read i	n the ST25	ΓA512 memo	ory					

^{1.} See *Table 10*.

5.2.2 R-APDU: payload format of a response

the ST25TA512 uses the I-Block format to reply to a command which used the I-Block format. This format is described in *Table 14*.

Table 14. R-APDU format

Name	Payload field					
	Data (optional)	SW1	SW2			
Length	Length Le byte		1 byte			
Data						
Status byte 1						
Status byte 2						

5.3 R-Block format

The R-Block is used to convey positive or negative acknowledgment between the RF host and the ST25TA512.

Table 15. R-Block format

NFC frame	SoD		-	EoD	
NFC ITAILIE	PCB DID		Payload	CRC	
Length	1 byte	1 byte	0 byte	2 bytes	
R(ACK) without the DID R(ACK) with the DID fie R(NAK) without the DID R(NAK) with the DID fie	eld: 0xAA or 0xAB 0 field: 0xB2 or 0xB3				
DID field (optional)		•			
-					
2 CRC bytes				-	

There are two kinds of R-Blocks:

- R(ACK): the acknowledgment block sent by the RF host or by the ST25TA512
- R(NAK): the non-acknowledgment block sent by the RF host

Table 16. R-Block detailed format

	b7-b6	b5	b4	b3	b2	b1	b0
	0b10	1	х	х	0	1	Х
R-Block							
Must be set to	1.						
0: ACK 1: NAK			•				
0: DID field is 11: DID field is 1	=			ı			
Must be set to	0						
Must be set to	1					•	
Block number							•

5.4 S-Block format

The S-Block is used to exchange control information between a reader and a contactless tag.

Table 17. S-Block format

NFC frame	So	D	-	EoD		
NFC ITAILIE	РСВ	DID	Payload	CRC		
Length	1 byte 1 byte		1 byte	2 bytes		
0xC2: for S(DES) when the DID fiel 0xCA: for S(DES) when the DID fiel 0xF2: for S(WTX) when the DID fiel 0xFA: for S(WTX) when the DID fiel						
DID field (optional)						
WTX field (optional) ⁽¹⁾						
2 CRC bytes						

This field is present when b5-b4 bits are set to 0b11 (S-Block is a WTX). see Table 18: S-Block detailed format.

There are two requests using the S-Block format:

- S(DES): the deselect command
- S(WTX): the Waiting Frame eXtension command or response.

A Waiting Time eXtension request occurs in RF when the operating time needed by ST25TA512 is greater than 19.2 ms.

The WTX field indicates the increase time factor to be used in this command execution (FDTtemp = WTX * 19.2 ms). WTX depends on FWI.

Table 18. S-Block detailed format

	b7-b6	b5-b4	b3	b2	b1	b0
	0b11	х	х	0	1	0
S-Block						
0b00: Deselection 0b11: WTX	t					
0: DID field is a 1: DID field is a	=		•			
Must be set to	0			•		
Must be set to	1				•	
Must be set to	0					

Note:

After receiving the deselect command, the session is released and ST25TA512 enters the Standby power mode.

In response to a RATS command, ST25TA512 returns FWI parameter (default frame waiting time used); when ST25TA512 needs more time for a command execution, it requests a frame waiting time extension by responding 0xF2 0xWTX (Request waiting time = FWI * WTX). If the reader accepts ST25TA512 request, it acknowledges by sending the command 0xF2 0xWTX. The frame waiting time becomes FWI * WTX for the current command only.

5.5 CRC of the RF frame

The two CRC bytes check the data transmission between the RF host and the ST25TA512. For the RF frame, the CRC is computed on all the data bits in the frame, excluding parity bits, SOF and EOF, and the CRC itself.

The CRC is as defined in ISO/IEC 13239. The initial register content shall be 0x6363 and the register content shall not be inverted after calculation.

5.6 NFC Forum Type 4 Tag protocol

5.6.1 Commands set

ST25TA512 command set is built to easily support the NFC Forum Type 4 Tag protocol.

Command nameBrief descriptionNDEF Tag Application SelectSelect the NDEF Tag ApplicationCapability Container SelectSelect the capability container (CC) file using the Select commandNDEF SelectSelect the NDEF file using the Select command.System File SelectSelect the system file using the Select command.ReadBinaryRead data from a fileUpdateBinaryWrite new data to a file

Table 19. Command set overview

5.6.2 Status and error codes

This section lists the status and the error code of the ST25TA512.

Table 20. Status code of the ST25TA512

	SW1	SW2	Comment
Value	0x90	0x00	Command completed successfully

Table 21. Error codes of the ST25TA512

	SW1	SW2	Comment
Length	1 byte	1 byte	Comment
Value	0x62	0x82	End of file or record reached before reading Le bytes
Value	0x63	0x00	Password is required
Value	0x63	0xCX	Password is incorrect, X further retries allowed (X can take value 0,1, 2)
Value	0x65	0x81	Unsuccessful updating
Value	0x67	0x00	Wrong frame length
Value	0x69	0x81	Command is incompatible with the file structure
Value	0x69	0x82	Security status not satisfied
Value	0x69	0x84	Reference data not usable
Value	0x6A	0x80	Incorrect parameters Le or Lc
Value	0x6A	0x82	File or application not found
Value	0x6A	0x84	File overflow (Lc error)
Value	0x6A	0x86	Incorrect P1 or P2 values
Value	0x6D	0x00	INS field not supported
Value	0x6E	0x00	Class not supported

5.6.3 NDEF Tag Application Select command

the RF host shall send this command to activate the NDEF Tag Application.

To activate the NDEF Tag Application, the RF host sends the Select command (see *Table 22*) in addition to the sequence defined in the NFC Forum digital protocol.

Table 22 defines the C-APDU of the Select command to select the NDEF Tag Application (called NDEF Tag Application Select).

Table 22. C-APDU of the NDEF Tag Application Select command

Name	CLA	INS	P1	P2	Lc	Data	Le	
-	0x00	0xA4	0x04	0x00	0x07	0xD27600 00850101	0x00	
Class byte								
Select instru	ction code							
P1 field								
P2 field				•				
Number of b	Number of bytes of data							
Application ID								
Le field								

Table 23 defines the R-APDU of the NDEF Tag Application Select command.

Table 23. R-APDU of the NDEF Tag Application Select command

	Data	SW1	SW2	Comment
Length	-	1 byte	1 byte	-
Value	-	0x90	0x00	Command completed
Value	-	0x6A	0x82	NDEF Tag Application not found
Value	-	0x6D	0x00	Class not supported

Note: For further return codes and definitions, refer to Section 5.6.2: Status and error codes.

5.6.4 Capability Container Select command

The RF host uses the Capability Container Select procedure to select the capability container (CC) file.

The CC file is selected when this command returns "command completed" in the R-APDU. *Table 24* defines the C-APDU of the Select command to select the CC file (called Capability Container Select).

Table 24. C-APDU of the Capability Container Select command

Name	CLA	INS	P1	P2	Lc	Data	Le
-	0x00	0xA4	0x00	0x0C	0x02	0xE103	-
Class byte							
Select instru	ction code						
P1 field							
P2 field				•			
Number of b	ytes of data				•		
CC file ID						•	
(empty field))						

Table 25 defines the R-APDU of the CC Select command.

Table 25. R-APDU of the Capability Container Select command

	Data	SW1	SW2	Comment
Length	-	1 byte	1 byte	-
Value	-	0x90	0x00	Command completed
Value	-	0x6A	0x82	File or application not found
Value	-	0x6D	0x00	Class not supported

Note: For further return codes and definitions, refer to Section 5.6.2: Status and error codes.

5.6.5 NDEF Select command

The RF host uses the NDEF Select command to select the NDEF file.

The NDEF file is selected when this command returns "command completed" in the R-APDU. *Table 26* defines the C-APDU of the Select command to select the NDEF file (called NDEF Select).

Table 26. C-APDU of the NDEF Select command

Name	CLA	INS	P1	P2	Lc	Data	Le	
-	0x00	0xA4	0x00	0x0C	0x02	0x0001	-	
Class byte	·							
Select instru	iction code							
P1 field								
P2 field				<u>.</u>				
Number of bytes of data								
0x0001: ND	EF file					•		
(empty field))						!	



Table 27 defines the R-APDU of the NDEF Select command.

Table 27. R-APDU of the NDEF Select command

	Data	SW1	SW2	Comment
Length	-	1 byte	1 byte	-
Value	-	0x90	0x00	Command completed
Value	-	0x6A	0x82	File or application not found

Note: For further return codes and definitions, refer to Section 5.6.2: Status and error codes.

5.6.6 System File Select command

The RF host uses this command to select the system file.

The System file is selected when this command returns "command completed" in the R-APDU.

Table 28 defines the C-APDU of the command to select the System file (called System Select).

Table 28. C-APDU of the System File Select command

Name	CLA	INS	P1	P2	Lc	Data	Le
-	0x00	0xA4	0x00	0x0C	0x02	0xE101	-
Class byte							
Select instru	ction code	•					
P1 field							
P2 field				•			
Number of b	ytes of data				•		
System file ID							
(empty field))						

Table 29 defines the R-APDU of the System File Select command.

Table 29. R-APDU of the System File Select command

	Data	SW1	SW2	Comment
Length	-	1 byte	1 byte	-
Value	-	0x90	0x00	Command completed
Value	-	0x6A	0x82	System file not found, no data is returned

Note: For further return codes and definitions, refer to Section 5.6.2: Status and error codes.

5.6.7 ReadBinary command

On receiving the ReadBinary command, the ST25TA512 reads the requested memory field and sends back its value in the R-APDU response.

Before sending a ReadBinary command, a file shall be selected by using a Select command.

The Response of the ReadBinary command is successful when the data to be read is within the selected file ^(a); in other words, when the sum of P1-P2 and Le fields is equal to or lower than the selected file length.

Table 30 defines the ReadBinary command.

Table 30. C-APDU of the ReadBinary command

Name	CLA	INS	P1 & P2	Lc	Data	Le		
-	0x00	0xB0	2 bytes	-	-	1 byte		
Class byte								
Read instructi	on code	•						
Offset in the fi	le selected		•					
(empty field)								
(empty field)								
Number of bytes to read between 0x01 ≤Le ≤max (Selected File length, 0xFFh)								

Table 31 defines the R-APDU of the ReadBinary command.

Table 31. R-APDU of the ReadBinary command

	Data	SW1	SW2	Comment
Length	-	1 byte	1 byte	-
Value	Content read	0x90	0x00	Command completed
Value	-	0x67	0x00	Wrong length
Value	-	0x69	0x82	Security status not satisfied
Value	-	0x6A	0x82	File or application not found
Value	-	0x6E	0x00	-

Note: For further return codes and definitions, refer to Section 5.6.2: Status and error codes.

30/52 DocID027776 Rev 4

a. For more details about CC file, refer to Section 3.1.2: CC file layout. For more details about NDEF file, refer to Section 3.1.3: NDEF file layout. For more details about System file, refer to Section 3.1.4: System file layout.

5.6.8 UpdateBinary command

On receiving the UpdateBinary command, the ST25TA512 writes the data field into the selected file and sends back a status in the R-APDU response. If needed, ST25TA512 will request a timing extension (see *Section 5.4: S-Block format*).

Before sending an UpdateBinary command, a file shall be selected by issuing a Select command.

Table 32 defines the UpdateBinary command.

Table 32. C-APDU of the UpdateBinary command

Name	CLA	INS	P1 & P2	Lc	Data	Le	
-	0x00	0xD6	2 bytes	1 byte	Lc bytes	-	
Class byte							
Write instruction	on code	•					
Offset in the file selected							
Number of bytes of data (0x01 ≤Lc ≤0xF6)							
Data to write in the ST25TA512 memory							
(empty field)							

Note: For further return codes and definitions, refer to Section 5.6.2: Status and error codes.

Table 33 defines the R-APDU of the UpdateBinary command.

Table 33. R-APDU of the UpdateBinary command

	Data	SW1	SW2	Comment
Length	-	1 byte	1 byte	-
Value	-	0x90	0x00 Command completed	
Value	-	0x65	0x81 Unsuccessful updating	
Value	-	0x67	0x00 -	
Value	-	0x69	0x82	Security status not satisfied
Value	-	0x6A	0x82	File or application not found
Value	-	0x6E	0x00	-

Note: For further return codes and definitions, refer to Section 5.6.2: Status and error codes.

5.7 ISO/IEC 7816-4 commands

The ISO/IEC 7816-4 command set offers some extended features such as the protection of the NDEF file. This command set is used to manage the right access of the NDEF file.

5.7.1 Verify command

The Verify command has two functions:

- 1. Check if a password is required to access to the NDEF file (the LC field = 0x00).
- Check that the password embedded in the Verify command allows the access to the memory (the Lc field = 0x10 and the password is present).

When the Lc field if equal to 0x00, the verify command returns a success code (0x90 00) provided that the access to the NDEF file does not require a password. When the access to the NDEF file is protected, the response to the Verify command returns an error code (0x63 00).

When the Lc field equals 0x10, on receiving the Verify command, the ST25TA512 compares the requested password with the data contained in the request and reports whether the operation has been successful in the response.

Before sending this command, an NDEF file shall be selected by issuing the NDEF Select command. Thus, this command checks the right access condition of the last NDEF file selected.

After a successful command, an access is granted for the whole NDEF file.

Table 34 defines the Verify command.

Name CLA INS P1 & P2 Data Lc Le 0x00 0x20 2 bytes 1 byte Lc bytes Class byte Instruction code Password identification 0x0001: Read NDEF password transmit 0x0002: Write NDEF password transmit Other: RFU⁽¹⁾ 0x00: the password is not present 0x10: the password is present in the data field Password

Table 34. Verify command format

(empty field)

^{1.} Return ERROR code when used.

Table 35 defines the R-APDU of the Verify command.

Table 35. R-APDU of the Verify command

	Data	SW1	SW2	Comment
Length	-	1 byte	1 byte	-
Value	-	0x90	0x00	Command completed, the password is correct
Value	-	0x69	0x84	The conditions of use are not satisfied (e.g. no NDEF file was selected, or Write access equal to FFh (write lock), or read access equal to FEh (read lock).
Value	-	0x69	0x81	Command incompatible with file structure
Value	-	0x69	0x82	Security status not satisfied
Value	-	0x6A	0x80	Incorrect parameter in command data field
Value	-	0x63	0x00	A password is required
Value	-	0x63	0xCX ⁽¹⁾	The password transmitted is incorrect and X encodes the number of further allowed retries.

^{1.} At each session, the RF host can check a password three times.

Note: For further return codes and definitions, refer to Section 5.6.2: Status and error codes.

5.7.2 Change Reference Data command

The Change Reference Data command replaces the read or write password related to the NDEF files previously selected. It can be performed only if the security status satisfies the security attributes for this command.

Before sending this command, the verify command with the correct NDEF write password shall be issued. Thus, this command changes the reference data of the NDEF file.

Table 36 defines the Change Reference Data command.

Table 36. Change reference data command format

Name	CLA	INS	P1 & P2	Lc	Data	Le			
-	0x00	0x24	2 bytes	0x10	Lc bytes	-			
Class byte	•								
Instruction co	de	•							
Password identification 0x0001: Read password transmit 0x0002: Write password transmit Other: RFU ⁽¹⁾									
0x10: the pas	0x10: the password is present in the data field								
NDEF new file Password									
(empty field)	(empty field)								

^{1.} Return ERROR code when used.



Table 37 defines the R-APDU of the Change Reference Data command.

Table 37. R-APDU of the Change Reference Data command

	Data	SW1	SW2	Comment
Length	0	1 byte	1 byte	-
Value	-	0x90	0x00	Command completed, the access right has been changed
Value	-	0x69	0x81	Command is incompatible with the file structure
Value	-	0x65	0x81	Unsuccessful updating
Value	-	0x69	0x82	Security status not satisfied
Value	-	0x6A	0x80	Incorrect parameter in file structure
Value	-	0x6A	0x82	File or application not found
Value	-	0x6A	0x86	Incorrect P1 or P2 values

Note: For further return codes and definitions, refer to Section 5.6.2: Status and error codes.

5.7.3 Enable Verification Requirement command

The Enable Verification Requirement command activates the protection by password of the NDEF file. When this command is successful, the read or write access to the NDEF file is protected by a 128-bit password. It can be performed only if the security status satisfies the security attributes for this command.

This command can update the right access of the NDEF file by writing into the EEPROM. In this case, the response timing will be around 5 ms.

Before sending this command, the verify command with the correct NDEF write password shall be issued. Thus, this command changes the access right of the NDEF file.

Table 38 defines the Enable Verification requirement command.

Table 38. Enable Verification Requirement command format

Name	CLA	INS	P1 & P2	Lc	Data	Le		
-	0x00	0x28	2 bytes	-	-	-		
Class byte	•							
Instruction cod	de							
	attributes le the read pro le the write pro							
(empty field)	(empty field)							
(empty field)								
(empty field)								

The last five bits identify the password sent in the Verify command.

Table 39 defines the R-APDU of the Enable Verification Requirement command.

Table 39. R-APDU of the Enable Verification Requirement command

	Data	SW1	SW2	Comment
Length	0	1 byte	1 byte	-
Value	-	0x90	0x00	Command completed, the password is correct
Value	-	0x69	0x81	Command is incompatible with the file structure
Value	-	0x69	0x82	Security status not satisfied
Value	-	0x6A	0x80	Incorrect parameter in command data field
Value	-	0x6A	0x82	File or application not found
Value	-	0x6A	0x86	Incorrect P1 or P2 values

Note: For further return codes and definitions, refer to Section 5.6.2: Status and error codes.

5.7.4 Disable Verification Requirement command

The Disable Requirement command deactivates the protection by password of the NDEF file. When this command is successful, the read or write access to the NDEF file is granted without security requirements. It can be performed only if the security status satisfies the security attributes for this command.

Before sending this command, the verify command with the correct NDEF write password shall be issued. Thus, this command changes the access right of the NDEF file.

This command can update the right access of the NDEF file by writing into the EEPROM. In this case, the response timing will be around 6 ms.

Table 40 defines the Disable Verification Requirement command.

Table 40. Disable Verification Requirement command format

Name	CLA	INS	P1 & P2	Lc	Data	Le	
-	0x00	0x26	2 bytes	-	-	-	
Class byte							
Instruction cod	de						
	attributes ble the read proble the write pro						
(empty filed)							
(empty filed)							
(empty filed)							

Table 41 defines the R-APDU of the Disable Verification Requirement command.

Table 41. R-APDU of the Disable Verification Requirement command

	Data	SW1	SW2	Comment
Length	0	1 byte	1 byte	-
Value	-	0x90	0x00	Command completed, the password is correct
Value	-	0x69	0x81	Command is incompatible with the file structure
Value	-	0x69	0x82	Security status not satisfied
Value	-	0x6A	0x80	CC file or System file selected
Value	-	0x6A	0x82	File or application not found
Value	-	0x6A	0x86	Incorrect P1 or P2 values
Value	-	0x65	0x81	Update failed

Note: For further return codes and definitions, refer to Section 5.6.2: Status and error codes.

5.8 ST proprietary command set

The RF host can be issued with the command set described in this chapter.

5.8.1 ExtendedReadBinary command

On receiving the ExtendedReadBinary command, the ST25TA512 reads the requested memory field and sends back its value in the R-APDU response.

Before sending an ExtendedReadBinary command, a file shall be selected by issuing an NDEF select command.

The response of the ExtendedReadBinary command will be successful even if the data to be read is beyond the NDEF message. The command returns an error code if the data to be read goes beyond the end of the file.

Table 42. C-APDU of the ExtendedReadBinary command

Name	CLA	INS	P1 & P2	Lc	Data	Le		
-	0xA2	0xB0	2 bytes	-	-	1 byte		
ST Class byte	· }							
Read instructi	on code	•						
Offset in the fi	le selected		•					
(empty field)								
(empty field)	(empty field)							
Number of by	Number of bytes to read between 0x01 ≤ Le ≤ 0xFF							

Table 43 defines the R-APDU of the read binary command.

Table 43. R-APDU of the ExtendedReadBinary command

	Data	SW1	SW2	Comment
Length	Le bytes	1 byte	1 byte	-
Value	Content read	0x90	0x00	Command completed
Value	-	0x67	0x00	Wrong length
Value	-	0x69	0x82	Security status not satisfied
Value	-	0x6A	0x82	File or application not found
Value	-	0x6A	0x86	Incorrect P1 or P2 values

Note: For further return codes and definitions, refer to Section 5.6.2: Status and error codes.

5.8.2 EnablePermanentState command

The command configures the NDEF file to the ReadOnly or to the WriteOnly State.

This command can update the right access to the NDEF file by writing into the EEPROM. In this case, the response timing will be around 6 ms.

RF command sets ST25TA512

Table 44 defines the EnablePermanentState requirement command.

Table 44. EnablePermanentState command format

Name	CLA	INS	P1 & P2	Lc	Data	Le		
-	0xA2	0x28	2 bytes	-	-	-		
Class byte	•							
Instruction cod	de							
	attributes the NDEF file i the NDEF file i							
(empty field)	(empty field)							
(empty field)								
(empty field)								

Table 45 defines the R-APDU of the EnablePermanentState command.

Table 45. R-APDU table of the EnablePermanentState command

	Data	SW1	SW2	Comment
Length	-	1 byte	1 byte	-
Value	-	0x90	0x00	Command completed
Value	-	0x65	0x81	Update failed
Value	-	0x69	0x82	Security status not satisfied
Value	-	0x6A	0x82	File or application not found
Value	-	0x6A	0x86	Incorrect P1 or P2 values

Note: For further return codes and definitions, refer to Section 5.6.2: Status and error codes.

5.8.3 UpdateFileType command

This command makes it possible to modify the file type of a selected file to Proprietary file (0x05) or NDEF file (0x04).

This command is granted only when application and file are selected and if the file length and access right have previously been set to 0X00h (message invalid, all access rights granted).

This command will update the file type located in the CC file by writing into the EEPROM. In this case, the response timing will be around 6 ms.

38/52 DocID027776 Rev 4

Table 46 defines the UpdateFileType command.

Table 46. UpdateFileType command format

Name	CLA	INS	P1	P2	Lc	Data	Le			
Value	0xA2	0xD6	0x00	0x00	0x01	0x04 or 0x05	-			
Class byte										
Select instru	iction code									
P1 field										
P2 field										
Number of bytes of data										
File type										
-		<u> </u>								

Table 47 describes the R-APDU of the UpdateFileType command.

Table 47. R-APDU of the UpdateFileType command

	Data	SW1	SW2	Comment
Length	-	1 byte	1 byte	-
Value	-	0x90	0x00	Command completed
Value	-	0x69	0x82	Security status not satisfied
Value	-	0x6A	0x80	CC file or System file selected
Value	-	0x6A	0x82	File or application not found
Value	-	0x6A	0x86	Incorrect P1 or P2 values

RF command sets ST25TA512

5.9 Specific RF command set

This section describes the command set that can be issued only by the RF host.

5.9.1 Anticollision command set

Table 48 lists the commands that can be issued only by the RF host. The format of these commands is described in the NFC Forum Digital Protocol specification.

Table 48. Commands issued by the RF host

Family command set	Command name	Instruction code
	ALL_REQ	0x52 ⁽¹⁾
	SENS_REQ	0x26 ⁽¹⁾
NFC-A technology	SDD_REQ	0x93 or 0x95
	SEL_REQ	0x93 or 0x95
	SLP_REQ	0x50

^{1.} Code on 7 bits.

Note:

In response to a SDD_REQ Command with a SEL_PAR value equal to 20h, ST25TA512 in the Operating Field transmit the requested cascade level of their NFCID1 (NFCID1 CLn, with n=1 or 2). The NFCID1 of ST25TA512 consists of 7 bytes. The length of the Response containing a complete NFCID1 cascade level (i.e., NFCID1 CL1, or NFCID1 CL2) is always 5 bytes. The coding of the Response depends on the value of the SEL_CMD byte and the size of the NFCID1.

Refer to the example below for more details.

Table 49. Example of anticollision sequence

Command	Code	Comment	Response	Code	Comment
SENS_REQ	26		ATO A	40.00	UID double size bit
or ALL-REQ	52	-	ATQA	42 00	frame anticollision
SDD_REQ 1	93 20	NVB 20 Number Valid bit (2 bytes Code & NVB)		CT uid1 uid2 uid3 BCC	CT Cascade Tag
SEL_REQ 1	93 70 CT uid1 uid2 uid3 BBC	NVB 70 (cmd NVB Uid lower bytes) CT Cascade Tag "0x88"	SAK & CRC	04 DAD7	UID Not complete

Comment Command Code Response Code Comment (UID 7bytes) NVB 20 uid4 uid5 **BCC Block Check** SDD REQ 2 95 20 uid6 uid7 Number Valid bit Character **BCC** (2 bytes Code & NVB) (XOR previous Bytes) 95 70 **NVB 70** uid4 uid5 (cmd NVB Uid Upper SAK & CRC 20 FC70 UID complete SEL_REQ 1 uid6 uid7

bytes)

Table 49. Example of anticollision sequence (continued)

5.9.2 RATS command and ATS response

BBC

RATS command and ATS response are used for NFC Forum Type 4A Tag Platform Device Activation (as defined in NFC Forum Digital Protocol specification).

Table 50 details the RATS command. This command shall be sent after the anticollision process.

Table 50. RATS command

The FSDI field codes the FSD that defines the maximum size that an RF host is able to receive. *Table 51* gives the conversion from FSDI to FSD.

Table 51. Conversion from FSDI to FSD

FSDI	0x0	0x1	0x2	0x3	0x4	0x5	0x6	0x7	0x8	0x9h- 0xE	0xF
FSD	16	24	32	40	48	64	96	128	256	RFU	256

The DID (Dynamic ID, optionally affected to the ST25TA512 by the host to address ST25TA512 in all commands) field defines the value of the addressed ST25TA512.

If DID is not '0', the ST25TA512 ignores the command if it contains a DID different from the one affected to ST25TA512 during RATS.

RF command sets ST25TA512

Table 52. ATS response

Name	TL	ТО	TA(1)	TB(1)		TC(1)	CRC
Byte field	0x05	0x75	0x80	0x	60	0x02	2 bytes
Bit field	-	-	-	b8-b5	b4-b1	-	-
Length of the response	e ATS						
FSCI = 5 →	FSC = 64 by	tes					
	ım ascending ım descendin		•				
FWI field (F	WI = 6 → FW	T = 19.2 ms))	•			
SFGI field (SFGI = 0 → SFGT =302 μs)							
The DID is supported							
2 CRC bytes	3						-

The FSCI codes the FSC which stands for the maximum frame size that the ST25TA512 is able to receive. The ST25TA512 is able to receive up to 64 bytes of command. If the RF host sends a command with more than 64 bytes, the ST25TA512 will not be able to treat the command and will not reply.

The FWI, which stands for the Frame Waiting time Integer, codes the FWT. This time corresponds to the maximum duration while an RF host shall send before sending the next command.

The SFGI which stands for the Start-up Frame Guard Time is the minimum time that the reader shall wait after receiving the response of the ST25TA512.

5.9.3 PPS command and response^(b)

PPS (Protocol and Parameter Selection) command and response are defined in ISO/IEC 14443-4, in the Protocol Activation of PICC Type A.

The PPS command allows to change the data rates of the ascending (RF host to ST25TA512) and descending (ST25TA512 to RF host) data rates. Usage of this command is optional, ST25TA512 only supports 106 Kb/s in both directions.

57/

42/52 DocID027776 Rev 4

b. Not useful in case of ST25TA512 which only supports a Data Rate of 106 Kb/s in both directions.

Table 53. PPS command

	Name	me INS (PPSS) PPS0 PPS				PPS1		CRC
	Byte field	0xDX		0x11	1 byte			2 bytes
	Bit field	b7-b4	b3-b0	-	0b0000	b3-b2	b1-b0	-
INIC	Instruction	code						
INS	DID		,					
-	PPS1 is pre	esent		•				
	RFU				'			
PPS1	Descending data rate (106 kb/s) = 0b00							
	Ascending data rate (106 kb/s) = 0b00							
-	2 CRC bytes							•

The ascending and descending data rates shall be coded as described in *Table 54*.

Table 54. Ascending and descending data rate coding

Value	0b00	0b01	0b10	0b11
Data rate	106 kbps	RFU	RFU	RFU

When the ST25TA512 is able to change both data rates, it returns the following response. The data rate of this response is 106 kbps; then, the ST25TA512 changes the ascending and descending data rates.

Table 55 gives the details of the PPS response.

Table 55. PPS response

Name	RESPONS	CRC	
Byte field	0xDX		2 bytes
Bit field	b8-b5 b4-b1		-
Response code			
DID field		•	
2 CRC bytes			-

RF device operation ST25TA512

6 RF device operation

6.1 Anticollision and Device Activation command set for the RF interface

The ST25TA512 device supports the command set defined in the NFC-A Technology and the Type 4A Tag Platform chapters of the NFC Digital Protocol V1.0 specification.

6.2 Open an RF session

Once the RF host has terminated the anticollision procedure and retrieve the ATS response, it shall send the SelectApplication command. The ST25TA512 will open an RF session. At this point, the RF host can send the applicative command set.

6.3 Close an RF session

The RF host can close the RF session by issuing one of these methods:

- send an S(DES) command
- turn off the RF field

6.4 Applicative command set

The applicative command set is composed of the following command sets:

- the NFC Forum Type 4 Tag command set
- the ISO/IEC 7816-4 command set
- the proprietary command set

7 Functional procedures

This section describes some procedure to access the memory or manage its protection.

7.1 Selection of an NDEF message

The RF host shall use this procedure to detect the NDEF message inside an ST25TA512.

The NDEF detection procedure is as follows:

- 1. Open an RF session
- 2. Send the SelectNDEFTagApplication command
- 3. Select the CC file
- 4. Read the CC file
- 5. Select the NDEF file.

7.2 Reading of an NDEF message

The RF host executes the NDEF read procedure to read the NDEF file.

- 1. Detect successfully the NDEF file using the NDEF detection procedure
- 2. Check that the read access without any security is granted for the NDEF file from the information provided by the CC file
- 3. Select the NDEF file
- Read the NDEF file.

7.3 Reading a locked NDEF file

The RF host executes this procedure to read an NDEF file which has been locked previously.

- Select the NDEF Tag Application
- 2. Select the NDEF file
- 3. Present the Read password by using the Verify command
- Read the data in the NDEF file.

7.4 Locking an NDEF file

The RF host executes this procedure to protect an NDEF file.

- Select the NDEF Tag Application
- 2. Check the right access provided by the CC file
- 3. Select the NDEF file
- 4. Present the NDEF file Write password by using the Verify command
- 5. Lock the NDEF file by sending the Enable verification command.

7.5 Unlocking an NDEF file

The RF host executes this procedure to unlock an NDEF file which has been locked previously.

- Select the NDEF Tag Application
- Select the NDEF file
- 3. Present the NDEF file Write password by using the Verify command
- 4. Unlock the NDEF file by sending the Disable verification command.

7.6 Reaching the read-only state for an NDEF file

The RF host executes this procedure to permanently lock an NDEF file that has been previously locked with password.

- Select the NDEF Tag Application
- 2. Select the NDEF file
- 3. Transmit the NDEF file Write password by using the Verify command
- 4. Send an EnablePermanentState command

7.7 Creating or Updating an NDEF file

- 1. Select the NDEF Tag Application
- 2. Select the NDEF file
- 3. Set the File Length to 0x00 using the UpdateBinary command
- 4. Write NDEF message content using the UpdateBinary command
- 5. Set the new File Length (must be always two written bytes)

7.8 Changing a File Type Procedure (applicable only on file 0x0001)

The RF host executes this procedure to change the File Type of a file for which all access rights were previously granted.

- 1. Select the NDEF Tag Application
- 2. Select the file 0x0001
- 3. Set the File Length to 0x00 using the UpdateBinary command
- 4. Send an UpdateFileType command with the New file Type as data

ST25TA512 UID: Unique identifier

8 UID: Unique identifier

The ST25TA512 is uniquely identified by a 7 bytes unique identifier (UID). The UID is a read-only code and comprises:

- The IC manufacturer code on 1 byte (0x02 for STMicroelectronics).
- The Product code on 1 byte.
- A device number on 5 bytes.

Table 56 describes the UID format.

Table 56. UID format

-	0x02	0xE5	5 bytes
IC manufacturer code			
ST25TA512 product code			
Device number			

Maximum ratings ST25TA512

9 Maximum ratings

Stressing the device above the ratings listed in *Table 57* may cause permanent damage to the device. These are stress ratings only and operation of the device at these or any other conditions above those indicated in the operating sections of this specification is not implied. Exposure to absolute maximum rating conditions for extended periods may affect the device reliability.

Table 57. Absolute maximum ratings

Symbol	Parameter		Min.	Max.	Unit	
T _A	Ambient operating temperature		-40	85	°C	
T _{STG}	Storage conditions	Sawn wafer on UV tape	15	25	°C	
h _{STG} ,			-	9 (1)	months	
t _{STG}		F	Kept in it	Kept in its original packing form		
_	Storage temperature	Sawn bumped wafer	15	25	°C	
T _{STG}	Storage time	(kept in its antistatic bag)	-	9 ⁽²⁾	months	
I _{CC} (3)	RF supply current AC0 - AC1		-	100	mA	
V _{MAX_1} (3)	RF input voltage amplitude between AC0 and AC1, V _{SS} pad left floating	V _{AC0} -V _{AC1} (Peak to Peak)	-	10	V	
V _{ESD}	Electrostatic discharge voltage (human body model) (4)		-	2000	V	

^{1.} Counted from ST shipment date.

^{2.} Counted from ST production (taping) date.

^{3.} Based on characterization, not tested in production. Maximum absorbed power = 100 mW at 7.5 A/m.

^{4.} AEC-Q100-002 (compliant with JEDEC Std JESD22-A114A, C1 = 100 pF, R1 = 1500 Ω , R2 = 500 Ω).

RF electrical parameters 10

This section summarizes the operating and measurement conditions, and the DC and AC characteristics of the device in RF mode.

The parameters in the DC and AC characteristics tables that follow are derived from tests performed under the Measurement Conditions summarized in the relevant tables. Designers should check that the operating conditions in their circuit match the measurement conditions when relying on the quoted parameters.

Table 58. Default operating conditions

Symbol	Parameter	Min.	Max.	Unit
T _A	Ambient operating temperature	–40	85	°C

Table 59. RF characteristics⁽¹⁾

Symbol	Parameter	Condition	Min	Тур	Max	Unit
f _C	External RF signal frequency	-	13.553	13.56	13.567	MHz
H_ISO	Operating field according to ISO	$T_A = 0$ °C to 50°C	1500	-	7500	mA/m
H_Extended	Operating field in extended temperature range	T _A = -40°C to 85°C	100	-	7500	mA/m
H _{min}	Field detect, set-up field ⁽¹⁾	$T_A = -40^{\circ}\text{C to } 85^{\circ}\text{C}$	-	50	-	mA/m
MI _{CARRIER}	100% carrier modulation index	MI=(A-B)/(A+B)	90	-	100	%
t ₁	Pause A length	-	28 / f _C	-	40.5 / f _C	μs
t ₂	Pause A low time	-	7 / f _C	-	t ₁	μs
t ₃	Pause A rise time	-	1.5 x t ₄	-	16 / f _C	μs
t ₄	Pause A rise time section	-	0	-	6 / f _C	μs
t _{MIN CD}	Minimum time from carrier generation to first data	From H _{min}	-	-	5	ms
W _t	RF write time (including internal Verify) for one page	-	-	4.468 ⁽²⁾	-	ms
C _{TUN} (3)	Internal tuning capacitor ⁽⁴⁾	f _C = 13.56 MHz	45	50	55	pF
t _{RF_OFF}	RF OFF time	Chip reset	-	-	0.1	ms

All timing characterizations performed on a reference antenna with the following characteristics: External size: 75 mm x 48 mm Number of turns: 4

Width of conductor: 0.5 mm

Space between two conductors: 0.5 mm

Value of the tuning capacitor: 50 pF (ST25TA512) Value of the coil: 2.5 µH Tuning frequency: 14.2 MHz.


- 2. Time between command EOF and Response SOF when updating NDEF Message Length.
- 3. See Capacitor value.
- 4. Characterized only, at room temperature only, measured at V_{AC0}-V_{AC1} = 5 V peak to peak at 13.56 MHz.



Ordering information ST25TA512

11 Ordering information

Table 60. Ordering information scheme for packaged devices

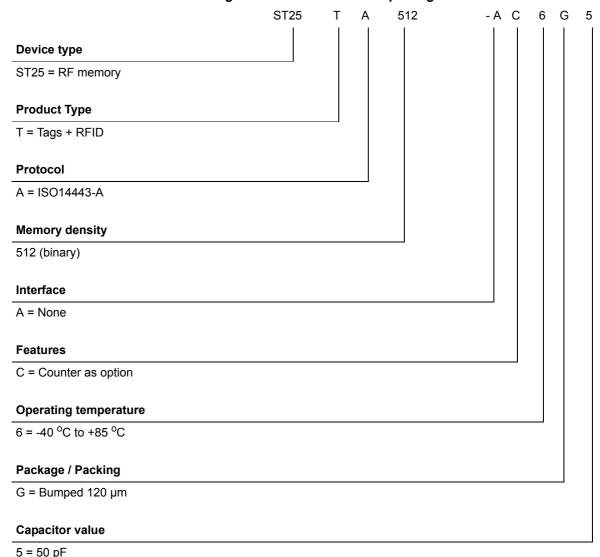

Note:

Parts marked as "ES", "E" or accompanied by an Engineering Sample notification letter, are not yet qualified and therefore not approved for use in production. ST is not responsible for any consequences resulting from such use. In no event will ST be liable for the customer using any of these engineering samples in production. ST's Quality department must be contacted prior to any decision to use these engineering samples to run a qualification activity.

50/52 DocID027776 Rev 4

ST25TA512 Revision history

12 Revision history

Table 61. Document revision history

Date	Revision	Changes	
22-Apr-2015	1	Initial release.	
13-Sep-2016	2	Updated Features and image on cover page. Added Section 5.8.3: UpdateFileType command and Section 7.7: Creating or Updating an NDEF file. Updated Section 7.8: Changing a File Type Procedure (applicable only on file 0x0001). Updated Figure 2: Changing the read access right to an NDEF file. Updated Table 10: RF command sets, Table 57: Absolute maximum ratings and Table 59: RF characteristics. Updated title of Table 51: Conversion from FSDI to FSD and of Section 11: Ordering information.	
27-Feb-2017	3	Updated document title and Features. Updated Table 59: RF characteristics and its footnote 4.	
05-Oct-2017	Updated Features and image caption on cover page. Updated Table 6: Field list and Table 16: R-Block detailed format. Updated footnote 3 of Figure 2 and Note:in Section 11.		

IMPORTANT NOTICE - PLEASE READ CAREFULLY

STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, enhancements, modifications, and improvements to ST products and/or to this document at any time without notice. Purchasers should obtain the latest relevant information on ST products before placing orders. ST products are sold pursuant to ST's terms and conditions of sale in place at the time of order acknowledgement.

Purchasers are solely responsible for the choice, selection, and use of ST products and ST assumes no liability for application assistance or the design of Purchasers' products.

No license, express or implied, to any intellectual property right is granted by ST herein.

Resale of ST products with provisions different from the information set forth herein shall void any warranty granted by ST for such product.

ST and the ST logo are trademarks of ST. All other product or service names are the property of their respective owners.

Information in this document supersedes and replaces information previously supplied in any prior versions of this document.

© 2017 STMicroelectronics - All rights reserved

